



PROBIOTICS IN PROGRESS FLOOD & RESTORATION PRODUCT USE

Chrisal Using probiotic bacteria to create a safe and healthy environment




CLEANING WITH CHRISAL HEAVY DUTY CLEANER



1.) Remove as much of the bulky waste as possible with scrapers/ brooms.



2.) Dilute with water at a rate of 5% (50 ml HDC/1L water).

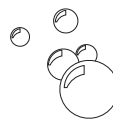

3.) Apply using foamer. May also be used with mops or scrub brushes.



4.) Let foam sit for 10-15 minutes, then rinse foam off with power washer, hose or mop.



5.) Remove waste water using a squeegee or shop vac.

MISTING & FOGGING WITH ULTRA AIR




1.) Use a fogger or sprayer that will evenly distribute a very fine mist of product evenly into the entire area.



2.) 1 L of concentrate per 400 sq.² (4300 ft.²) Do not make areas wet! Apply UA sparingly but evenly at each application.



3.) Apply a very fine, light mist up into the air toward the ceiling, allowing the product to drift down and land on furniture and floors.

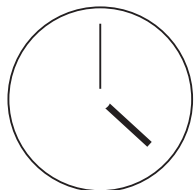

APPLICATION SCHEDULE

For areas that are continually being re-contaminated a twice weekly application schedule is recommended. For severe odour, contamination and mold issues, daily application may be required until the problem is resolved.

NOTES

- Shake the product before using, probiotic bacteria settle out if undisturbed.
- Water temperature – Between 10 °C (50°F) and 60°C (140°F) not hotter.
- Storage– Do not let Chrisal products freeze or be exposed to direct sunlight.
- Using overhead misting systems, hand or battery backpack sprayers or foggers, apply in a very light mist up in the air allowing it to drift down onto the surfaces (bedding, furniture, fixtures, carpet).
- Do not make surfaces wet, apply a fine mist every three days.
- The probiotic bacteria in the UA & HDC remain dormant in the concentrate until mixed with water or sprayed onto surfaces.
- Ultra Air is non-toxic, non-caustic & environmentally friendly – contains only water and stabilized probiotic bacteria.
- HDC is NSF certified for use in food facilities.
- If disinfectant products must be used – use them prior to UA & HDC. Allow any disinfected areas to dry thoroughly before probiotic products are used. Once most disinfectants have dried they become inert and will not harm bacteria.



CHOICE PROBIOTICS
— THE SAFE NATURAL SOLUTION —

FULL LINE OF PRODUCTS
www.choiceprobiotics.com

CONTACT
townst@choiceprobiotics.com